

1/5

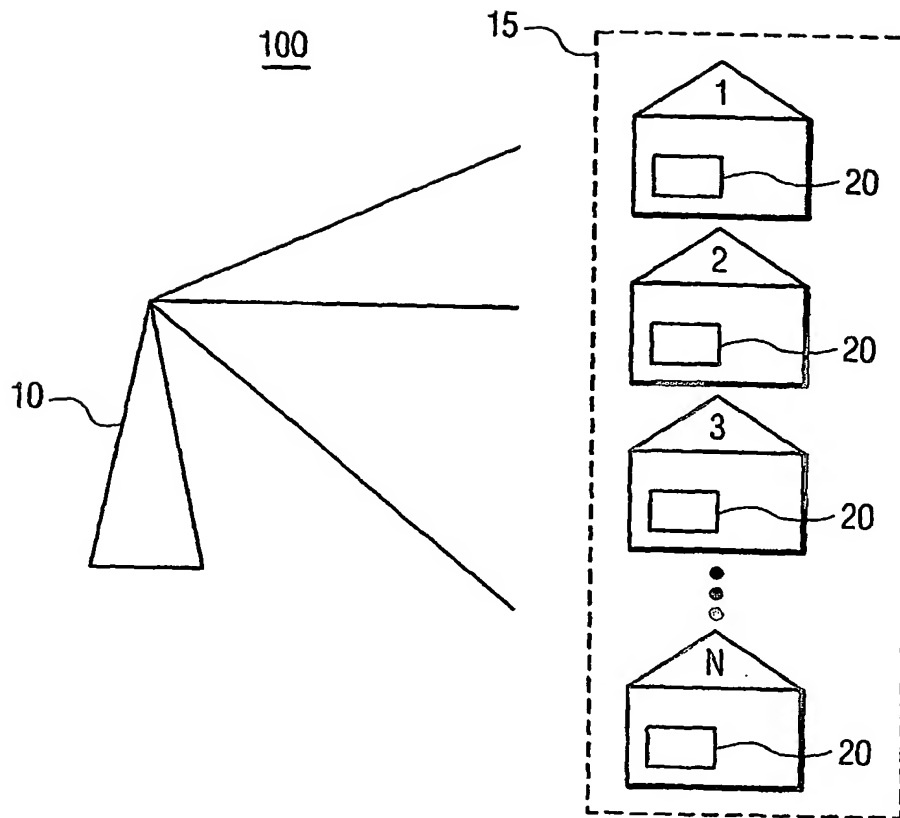


FIG. 1

2/5

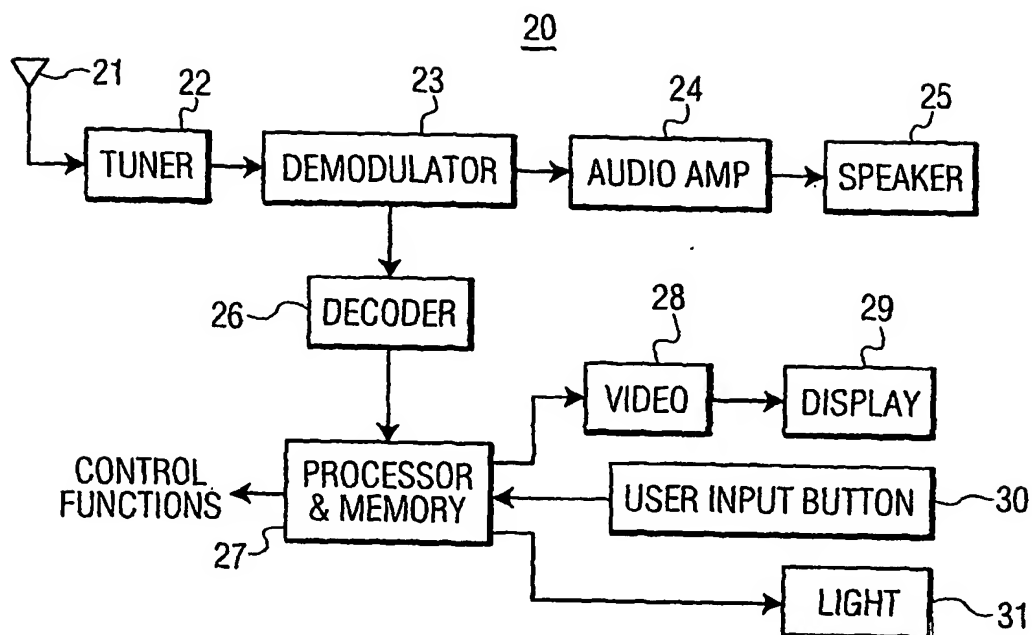


FIG. 2

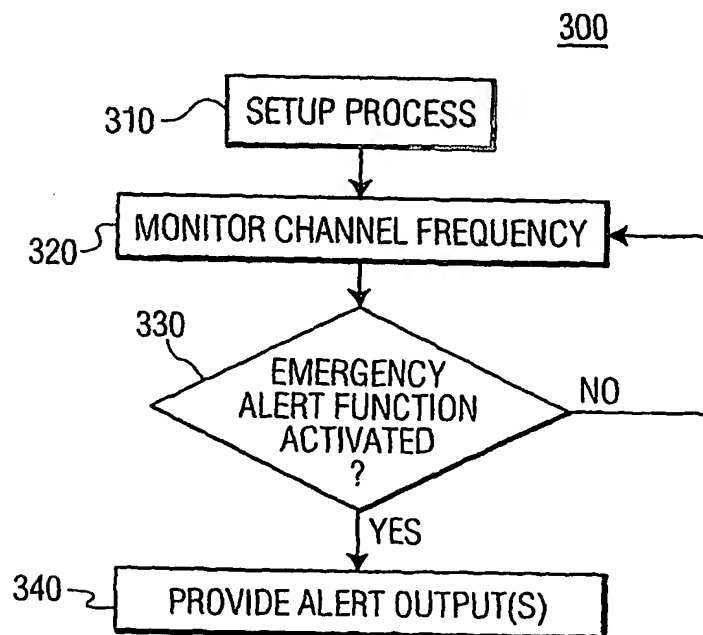


FIG. 3

3/5

400

INITIAL CONDITION	EMERGENCY ALERT FUNCTION ACTIVATED?	BUTTON STATE	OPERATION(S) PERFORMED
OFF	YES	1	TURN TV ON
			STOP ALARM
			TURN OFF LEDS
			PLAY NWR
			BLANK TV VIDEO
			DISPLAY MESSAGE
ON	YES	2	TURN TV OFF
		1	PLAY NWR
		2	TURN AUDIO OFF
		1	STOP ALARM
			TURN OFF LEDS
			PLAY NWR
			DISPLAY MESSAGE
ON	YES	2	RESTORE AUDIO
			REMOVE MESSAGE
		1	PLAY NWR
		2	RESTORE AUDIO
ON	NO	1	PLAY NWR
		2	RESTORE AUDIO

FIG. 4

4/5

20

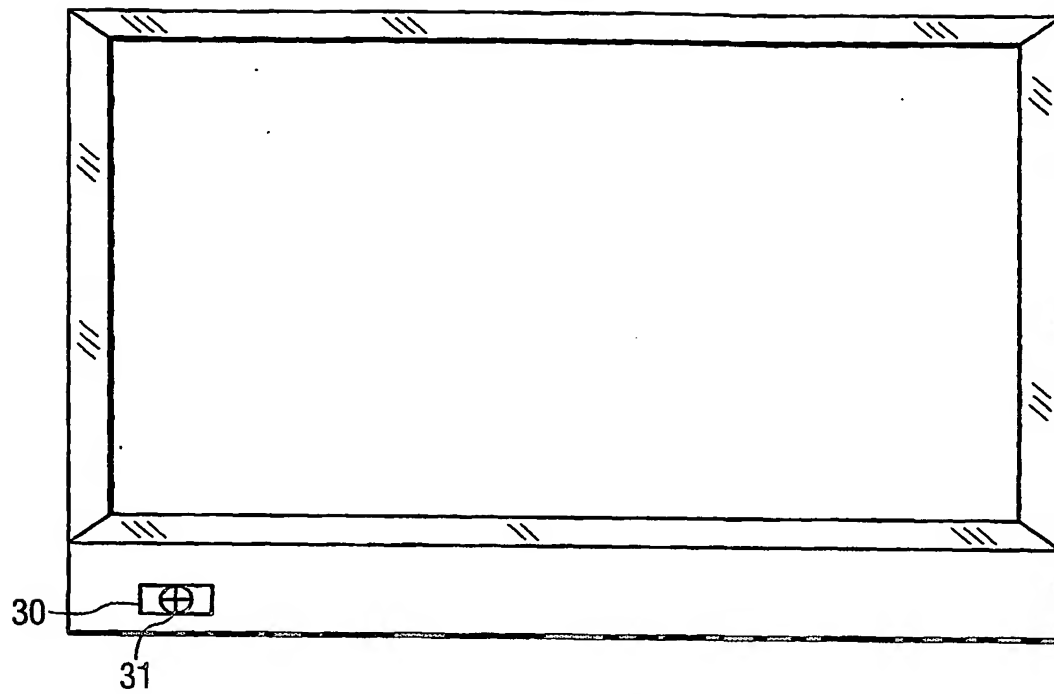


FIG. 5

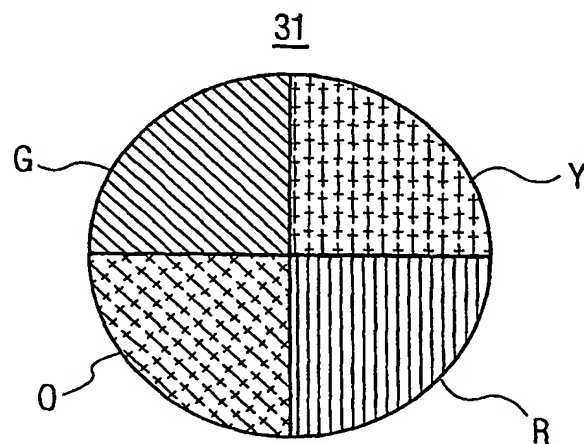


FIG. 6

5/5

31

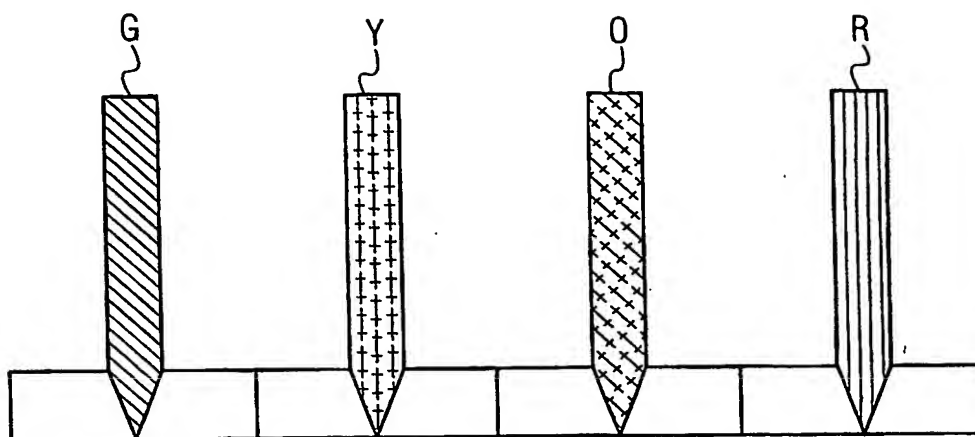


FIG. 7

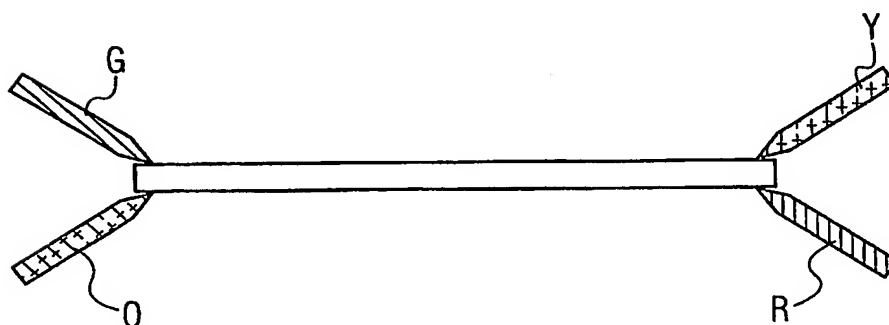


FIG. 8